



CANON XH-A1 QUICK SETUP

1. Press lock button, and turn power control to 'Tv'.
2. Open LCD screen, and check settings.
3. Use menu controls to select 'HDV' '24F' and the kind of mic you're using (e.g. XLR).
4. Set shutter speed to 1/48 for 24F (1/60 for 60i or 30F).
5. Set focus to 'Manual'. (Use 'Push AF' to focus when camera is in Pause.)
6. Turn ND filter off, unless bright exterior light requires it.
7. Turn AGC 'On'
8. Turn AWB 'On'
9. Set Audio Level to 'A' (Auto).

MANUAL CONTROL

EXPOSURE - press 'Exposure Lock' (A) and adjust iris ring (B).

WHITE BALANCE - turn AWB off (8), set preset control (C) to 'a' or 'b', point camera at white card and fill frame with white. Push and hold WB set (D) until icon stops blinking.

GAIN - turn off AGC (7), set gain level with switch (E). 'L' = no gain.

AUDIO - turn audio level (9) to 'M' (Manual), adjust levels with pots (F)

FOCUS - outer ring (G).

ZOOM - middle ring (H)